




## Broiler Brick Replacement Instructions Model 25 Gas Broiler



1. Remove the two screws that hold the rear marinite cover and remove. Place aside.

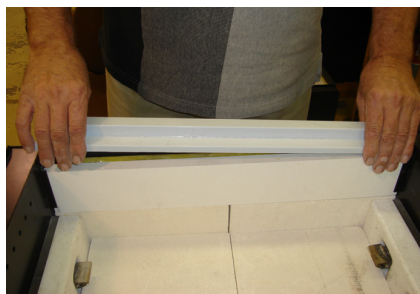

2. Lift out the marinite bar and place aside.




3. Lift out the insulation to expose the rear wall brick. Place aside.




4. Remove the floor brick by placing a screwdriver tip between the floor bricks



5. Pry up one side up enough to lift and remove the floor brick.

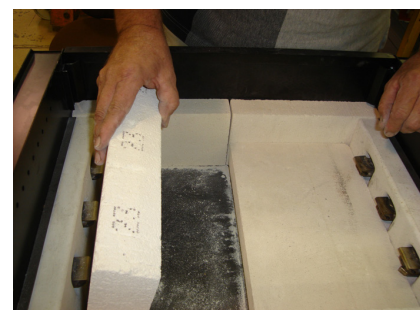

6. Stand brick up on edge and move to one side.

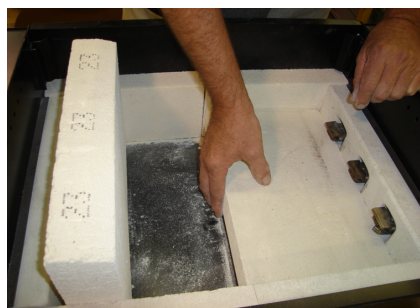

7. Lift the other floor brick and also stand on edge.



8. Remove side brick by sliding it off the Cobra heads and lift it out. Place aside.



9. Slide one side of the back wall brick away from the back. Remove and set aside.

Continued on page 2



**EmberGlo**

EmberGlo  
A Div of Midco® International Inc.  
4140 West Victoria Street  
Chicago, Illinois 60646  
toll free 866.705.0515  
tel 773.604.8700  
fax 773.604.4070  
web www.emberglo.com  
e-mail sales@emberglo.com

**SAFETY INFORMATION TERMS:** The following terms are used to identify hazards, safety precaution of special notations and have standard meanings throughout this manual. They are printed in all capital letters using a bold type face as shown below, and preceded by the exclamation mark symbol. When you see the safety alert symbol and one of the safety information terms as shown below, be aware of the hazard potential.



**DANGER:**

Identifies the most serious hazards which will result in severe personal injury or death.

**WARNING:**

Signifies a hazard that could result in personal injury or death.

**CAUTION:**

Identifies unsafe practices which would result in minor personal injury or product and property damage.

# Broiler Brick Replacement Instructions




10. Vacuum the broiler floor to remove excess brick particles.


11. Replace the back wall brick by sliding one side in first then the other.



12. Replace the side brick by sliding it over the Cobra heads.

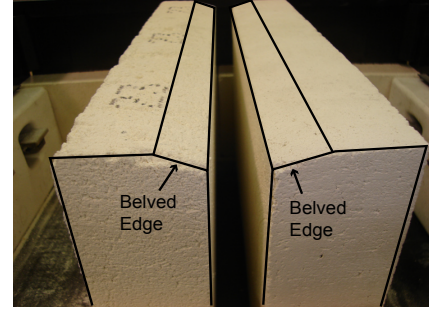

13. On the broiler floor stand the floor bricks on the flat edge with the beveled edges up and facing each other.

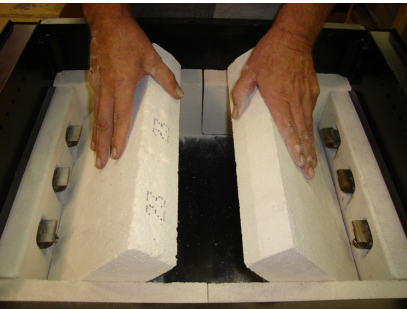

14. Position floor bricks in approximate final placement. Using both hands slowly lower both sides at the same time.




15. As they come together the bevels will match up. Slowly release both until they sandwich together.




16. Press down with the same pressure in both hands until the bricks are flat on the floor of the broiler.



17. Reinstall the insulation with the foil side facing the inside of the broiler.

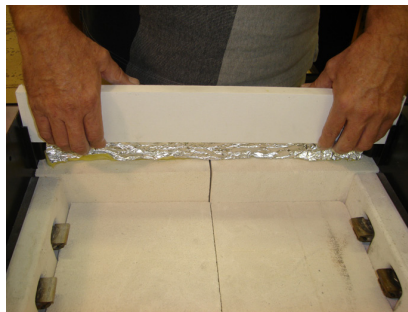

18. Replace the marinite bar by sliding down and into place.

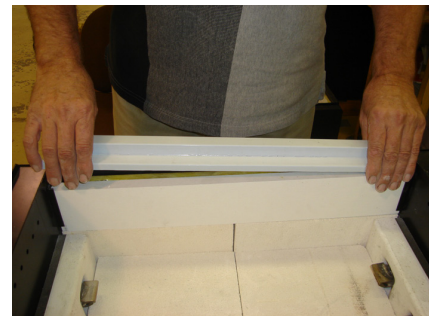

19. Reinstall marinite cover and tighten the screws on the back of the broiler.