

## Gas Broiler Power Cord Replacement Kits:

Kit # 1403-70R - 120V with Terminal

Kit # 1415-10R - 220V



**CAUTION:** Read and understand this service bulletin thoroughly before starting. Only a trained, experienced service technician should attempt this service procedure.

The replacement cord kits come in two voltages - 120V or 220V. Be sure you have the correct replacement cord.

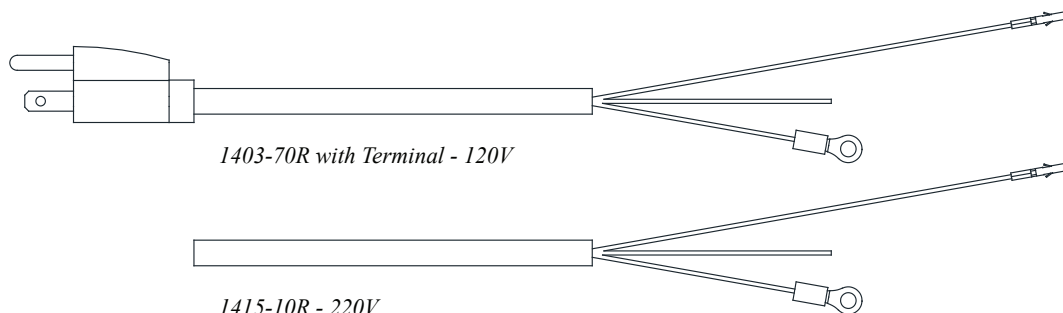


Figure 1 - Power Cord Replacement - 120V and 220V

### Instructions

#### With White Plastic Connectors

If current set up includes white plastic connectors, then remove old part and replace with new.

1. Unscrew acorn nut and cover to get to wires.
2. Remove blue wire nut and separate white wires.
3. Disconnect white connector from on-off switch and remove power cord wire.
4. Remove ground screw and remove power cord.
5. Slide new power cord wire with pin into the white connector and connect to on-off switch.
6. Reattach ground screw to ground power cord.
7. Connect white wires with blue wire nut.
8. Fit all wires back into box and tighten cover with acorn nut.

### Instructions

#### Without White Plastic Connectors

If current set up does not include white plastic connectors, follow steps to prepare for blue wire nuts.

1. Unscrew acorn nut and cover to get to wires.
2. Remove blue wire nut (2) connecting the power cord to the on-off switch and motor.
3. Remove ground screw and remove power cord.
4. Prep new power cord:
  - a. Cut pin off of black wire and strip 0.5" from black wire.
  - b. **Do not touch other wires.**
5. Reattach ground screw to ground power cord.
6. Connect wires using blue wire nuts per wire diagram.
7. Fit all wires back into box and tighten cover with acorn nut.

**AVOID ERROR IN PARTS SELECTION.** When ordering use complete EmberGlo Part Number and Description. Furnish the Product Model Number, Bill of Material Number and Serial Number (if available) from the specification plate found on the product.

**IMPORTANT:** Availability of parts as well as specifications are subject to change without notice. Please consult factory for item availability.

**SAFETY INFORMATION TERMS:** The following terms are used to identify hazards, safety precaution of special notations and have standard meanings throughout this manual. They are printed in all capital letters using a bold type face as shown below, and preceded by the exclamation mark symbol. When you see the safety alert symbol and one of the safety information terms as shown below, be aware of the hazard potential.



**DANGER:**

**WARNING:**

**CAUTION:**

Identifies the most serious hazards which will result in severe personal injury or death.

Signifies a hazard that could result in personal injury or death.

Identifies unsafe practices which would result in minor personal injury or product and property damage.



EmberGlo  
A Div of Midco® International Inc.  
4140 West Victoria Street  
Chicago, Illinois 60646  
toll free 866.705.0515  
tel 773.604.8700  
fax 866.580.8700  
web [www.emberglo.com](http://www.emberglo.com)  
e-mail [sales@emberglo.com](mailto:sales@emberglo.com)

As an ISO 9001:2008 certified company, we proudly design, manufacture and assemble our products in Chicago, Illinois, USA.

*Quality Designed for Proven Performance*

822  
**8476 20**  
Printed in USA